

Kaymar

Fitting Instructions



Suitable for
Toyota LandCruiser 80
Year
Type
Part **Auxiliary Light**
(For STD Carrier)

Applicable to Part Numbers

K1108

For use with:

K1100, K1100A, K1110

Date published November 28, 2017

IMPORTANT - BEFORE COMMENCING INSTALLATION

Please verify the part number corresponds with the list above.


Read through these instructions and check items in the supplied fitting kit matches the attached list.

Every effort is made to ensure instructions are as accurate as possible at the time of publishing however work should not be commenced until the document has been thoroughly read, measurements checked and all components in the package verified as complete. Kaymar has used reasonable care in preparing the information included in these documents, but makes no representations or warranties as to the completeness or accuracy of the information. Information is supplied upon the condition that the persons receiving the information will make their own determination as to its suitability for their purposes prior to use. Kaymar assumes no liability whatsoever for any damages incurred by you resulting from errors in or omissions from the information included herein. Kaymar reserves the right to make changes without further notice to any products to improve reliability, function or design.

AUXILIARY LIGHT FITTING

Suitable for LandCruiser 80 Series when fitting a Kaymar Standard Carrier

To be done while bumperette is off vehicle.

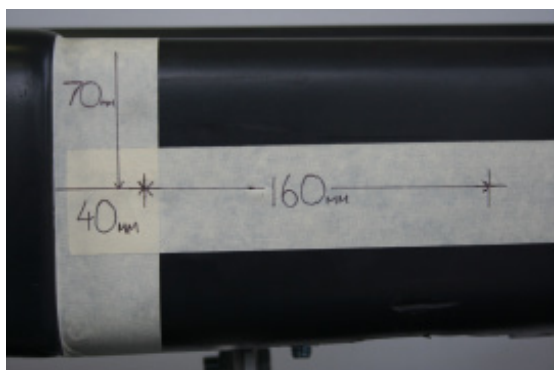

1. Mark bumperette as per photo. Drill two outer holes to 6mm and hole for wiring to 10mm, in centre of two outer holes.

Kaymar

Fitting Instructions



2. Fit light to bumperette, using M5 screw plus M5 whizz nut supplied.
3. Fit terminals and connect to wiring harness.
4. Repeat other side. This can be done while bumperette is still on vehicle.